

For best results, disassemble the entire guitar body, if you are not familiar with how to do this we highly recommend contacting a professional guitar repair person for assistance.

Warning: Exercise extreme caution when cutting the vinyl.

Step 1

Remove the strings and hardware from your guitar.



Step 2

Place the guitar body on top of the printed vinyl.




Step 3a

With a sharp trimming knife, cut out the printed vinyl approximately 1/8th inch from edge of body.




Step 3b

You can achieve a good clean cut if you let the edge or the side of the trimming knife ride along the side of the body.

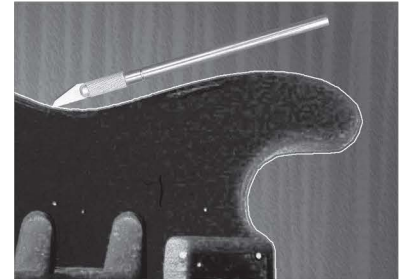

Step 4

Remove the guitar body to reveal the cut body outline. Use a sharp trimming knife to trim any uncut edges.

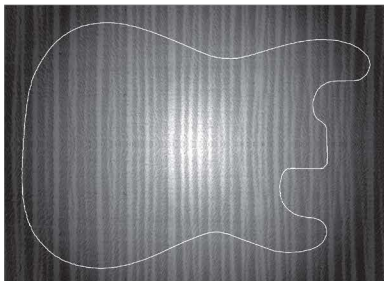

Step 5

Remove the paperbacking from the top half of the print and position the vinyl on the top half of the guitar body.



Step 6

Remove the remaining paper backing and fit the rest of the printed vinyl to the guitar body using an art squeegee or a soft flat edge to smooth the surface.



Step 7

Use a sharp trimming knife to trim out around neck joint, body cavities and hardware. Then, reassemble your guitar.

